



OPERATION, SERVICE AND PARTS OF R-450 OT ROTATING REAR RAILGEAR KIT

SAFETY PRECAUTIONS

If any operating, services or parts problems are encountered, please call G&B Specialties, Inc. for technical assistance.



- Failure to heed to any of the following warnings could result in severe bodily injury and/or equipment damage.
- Read and understand this manual completely before attempting operation of the railgear equipped vehicle.
- Operating instructions provided below only address the Rafna Industries railgear equipment. Applicable railway company procedures and policies must be adhered to.
- Railway company rules governing rail travel must be observed at all times.
- Ensure that the position and function of all railgear controls are known before attempting operation.
- Ensure the railgear is locked in road position before starting road travel.
- Ensure all body parts and loose clothing are clear of any moving parts of the equipment.
- If misalignment of the railgear equipment is indicated, promptly perform the alignment procedure.
- Before performing any work under the vehicle or railgear, ensure the engine is turned off and the parking brake is set.
- Never operate the vehicle if the Gross Vehicle Weight Rating (GVWR), Gross Axle Weight Rating Front or Rear (GAWR), or the wheel or tire load ratings are exceeded.



OPERATION OF ROTATING REAR RAILGEAR KIT

With the railgear kit installed on this vehicle, it may be operated as normal, however the vehicle has decreased ground clearance and angles of approach and departure due to the railgear. Caution must be used when operating the vehicle.

Never operate the vehicle if the Gross Vehicle Weight Rating (GVWR), Gross Axle Weight Rating Front or Rear (GAWR), or the wheel or tire load ratings are exceeded.

Refer to the Hydraulic Kit Operation, Service, and Parts manual for information on the location and operation of the railgear hydraulic system controls.

Placing The Vehicle On Rail – To Lower The Railgear:

1. Disengage the mechanical locking pins by pulling on the locking cable handle. Do not force the locking cable. If the lock pins cannot be disengaged, raise the railgear slightly.
2. Hold the locking cable handle in the disengaged position.
3. Lower the railgear and release the locking cable handle once the railgear has rotated past the road locked position.
4. As the railgear is being deployed, it will start taking some of the vehicle's load. The railgear's spring suspension should be observed compressing at least 1" under this load. (If this is not the case, **DO NOT use the railgear**. Inspect the railgear for lubrication and damage.)
5. Continue lowering the railgear until the hydraulic cylinders are fully extended. In this position, the railgear should be about 3° over center.

Removing The Vehicle From Rail – To Raise The Railgear:

1. Raise the railgear.
2. Continue raising the railgear until the lock pins click into the road locked position. The hydraulic cylinders should be completely retracted.
3. Ensure that the lock pins are engaged.



SERVICE OF ROTATING REAR RAILGEAR KIT

The railgear kit must be serviced regularly to avoid damage to the equipment. Table 1 below provides the Recommended Service Schedule and the detailed service procedures follow.

Figure 1 provides the Non-Standard Fastener Torque Values. Table 2 provides Standard Fastener Torque Values for all other fasteners.

Grease fittings are provided at all railgear lubrication points as shown in Figure 2. The recommended lubricant for all lubrication points on this railgear is ESSO LONAX EP2 grease or equivalent. In cold weather areas/seasons, SHELL DARINA XL102 or equivalent may be used.

Table 1: Recommended Service Schedule

Service Required	Daily	Weekly	Monthly	3 Months	6 Months
Inspect the rail wheel tread and flange condition	✓	✓	✓	✓	✓
Check and adjust rail wheel load	✓	✓	✓	✓	✓
Visually inspect the railgear for damaged or worn parts	✓	✓	✓	✓	✓
Check for loose rail wheels and fasteners (re-torque if required)	✓	✓	✓	✓	✓
Ensure railgear lock system is functioning correctly	✓	✓	✓	✓	✓
Ensure the vehicle is in good operating condition	✓	✓	✓	✓	✓
Inspect all hydraulic components for leaks or wear		✓	✓	✓	✓
Check and adjust rail sweeps		✓	✓	✓	✓
Grease inner tube lower pivot points			✓	✓	✓
Grease inner and outer tubes			✓	✓	✓
Grease cylinder ends			✓	✓	✓
Grease lock system pins			✓	✓	✓
Grease railgear wheel bearings				✓	✓
Check and adjust rail wheel alignment					✓
Check and repack rail wheel bearings					✓

Table 2: Standard Fastener Torque Values

Fastener Size	Fastener Torque Value (ft-lbs) Dry
1" UNC Gr. 8 Fasteners	250
3/4" UNC Gr. 8 Fasteners	175
5/8" UNC Gr. 8 Fasteners	150
1/2" UNC Gr. 8 Fasteners	100
3/8" UNC Gr. 8 Fasteners	40
1/4" UNC Gr. 8 Fasteners	12



Figure 1. Non-Standard Fastener Torque Values


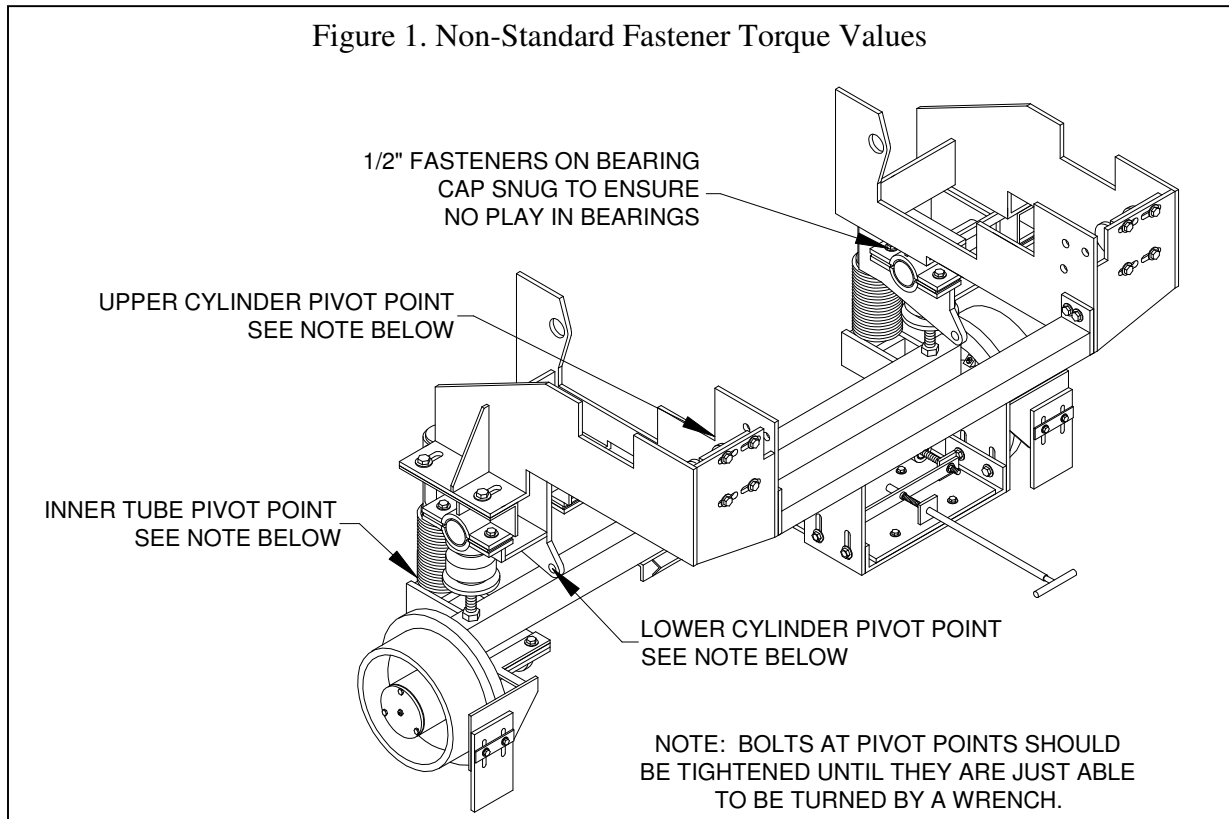


Figure 2. Railgear Lubrication Points



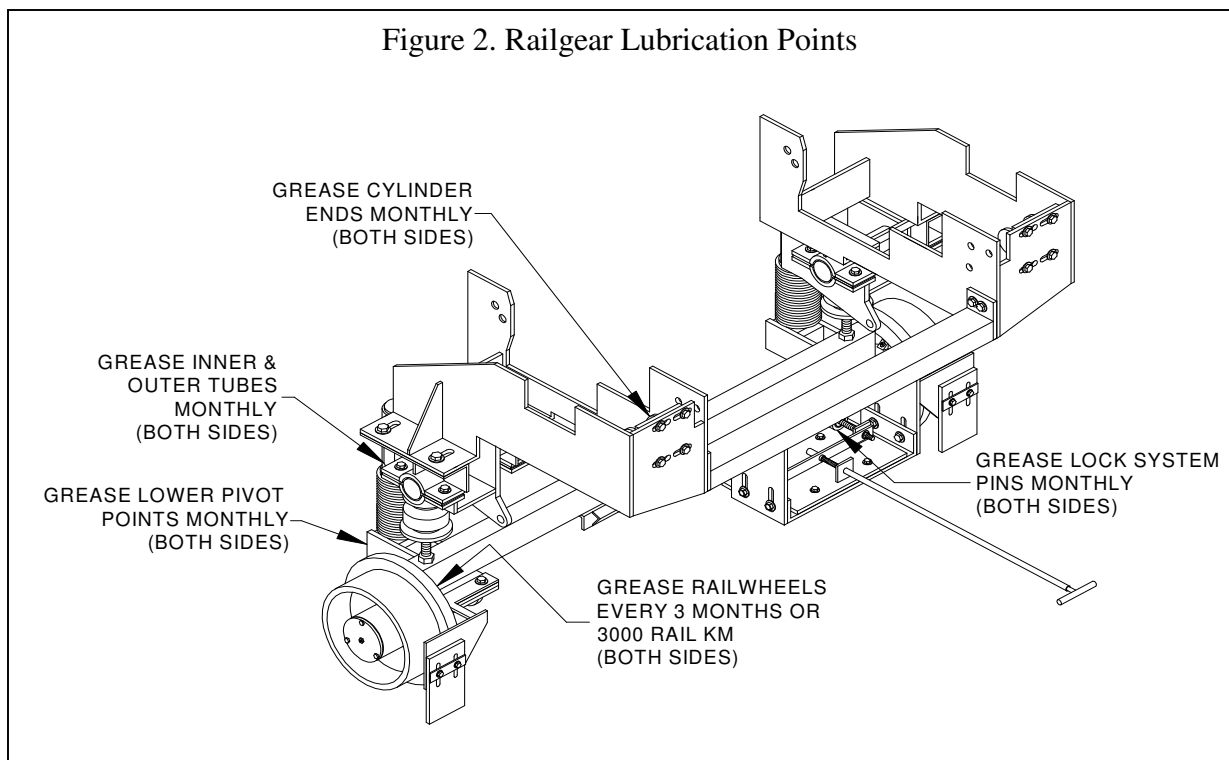

RAIL WHEEL BEARING ADJUSTMENT

The rail wheel bearings require periodic adjustment in order to keep the end-play within specification. If the rail wheel bearings are not correctly adjusted, failure may occur that will not be covered under the railgear warranty. Check and adjust the bearing end-play with the railgear in the road position and with the rail wheels free to turn.

Use a magnetic base dial gauge to measure the end-play of each rail wheel bearing. The bearing end-play must be between 0.001" and 0.005". If this is not the case, adjust as follows:

1. Remove the rail wheel hubcap and gasket by removing the three 1/4" bolts and 1/4" lock washers.
2. Remove the spindle nut cotter pin.
3. Ensure that the wheel bearing cavity is full of grease.
4. While rotating the rail wheel forward, torque the spindle nut to 20 ft-lbs. Then loosen the spindle nut and re-torque it to 6 ft-lbs. Re-check and re-adjust the bearing end-play if required. If no torque wrench is available, tighten the spindle nut until the rail wheel is difficult to turn by hand. Then loosen the spindle nut and retighten it just until no looseness can be felt in the bearings. Re-adjust the bearing end-play with a torque wrench as soon as possible.
5. Install a new 3/16" x 2" long cotter pin through the spindle nut. Tighten the spindle nut slightly if needed to insert the cotter pin.
6. Re-install the hubcap and gasket using the 1/4" bolts and new 1/4" lock washers. Blue Loctite can be used on the bolts as an added safety measure. Tighten and torque the 1/4" fasteners to 12 ft-lbs dry. Do not over torque.

RAIL SWEEP ADJUSTMENT

The distance between the rail sweep rubber and the rail is adjustable and should be maintained at approximately $\frac{1}{8}$ ". To adjust the rail sweep rubber, with the railgear in the rail position, loosen the two 1/4" fasteners which secure the rail sweep rubber to the rail sweep bracket. Slide the rail sweep rubber up or down for the correct clearance. Tighten and torque the 1/4" fasteners to 12 ft-lbs dry. Do not over torque.



RAIL WHEEL LOAD ADJUSTMENT

During rail travel, the railgear removes a predetermined portion of the vehicle's load from the vehicle's wheels and carries it on the rail wheels. A minimum amount of load must be maintained on the rail wheels in order to avoid derailment. Likewise, a minimum amount of load must be maintained on the vehicle wheels in order to provide traction for acceleration and braking.

The rail wheel load should be adjusted following the installation of the railgear once the vehicle has had all of its permanent load (service body, crane, welders, etc) installed. The rail wheel load requires periodic checks, however it should only require re-adjustment if the railgear is moved, the vehicle equipment is changed, or the vehicle suspension settles or is changed. As non-permanent load is added to and/or removed from the vehicle, the rail wheel load will change also. This is acceptable as long as the weight ratings of the vehicle, axles, wheels, tires and railgear are not exceeded and as long as the minimum rail wheel load is maintained.

The rail wheel load must be a minimum of **800-1000 lbs** and is checked as described below using a hydraulic bottle jack equipped with a gauge. If the gauge on the hydraulic bottle jack reads in pounds per square inch (psi), use Table 3 along with the jack bore diameter to convert this reading to pounds (lbs). If the gauge reads in pounds, then no conversion is required.

Check each rail wheel load as follows:

1. Place the vehicle on a straight and level section of rail with the railgear lowered to the rail position. Ensure the railgear is taking load through the tread of the rail wheel and not on the flange of the rail wheel. The vehicle should only be carrying the permanently attached load (service body, crane, etc) and any always carried non-attached load (welders, etc) during this procedure. Do not include the operator or passengers. Ensure the vehicle tires have been inflated to the manufacturer's recommended air pressure and that they are not in contact with any obstructions except the rails.
2. Place the hydraulic bottle jack on a solid surface beneath the rail wheel spindle housing and jack the rail wheel off the rail.
3. Insert a piece of paper between the rail and the rail wheel. Lower the jack until the rail wheel squeezes the paper so that it cannot be pulled out.
4. Slowly jack up the rail wheel while pulling on the paper and observe the jack gauge. When the paper can be pulled out, stop jacking.
5. Record the load or pressure reading on the jack gauge.
6. If necessary convert the pressure reading to a load reading using the supplied table.



Table 3: Rail Wheel Load vs Jack Pressure and Bore

Jack Pressure (PSI)	Jack Cylinder Bore Diameter (inches)								
	7/8	15/16	1	1 1/16	1 1/8	1 3/16	1 1/4	1 5/16	1 3/8
540	320	370	420	480	540	600	660	730	800
560	340	390	440	500	560	620	690	760	830
580	350	400	460	510	580	640	710	780	860
600	360	410	470	530	600	660	740	810	890
620	370	430	490	550	620	690	760	840	920
640	380	440	500	570	640	710	790	870	950
660	400	460	520	590	660	730	810	890	980
680	410	470	530	600	680	750	830	920	1010
700	420	480	550	620	700	780	860	950	1040
720	430	500	570	640	720	800	880	970	1070
740	440	510	580	660	740	820	910	1000	1100
760	460	520	600	670	760	840	930	1030	1130
780	470	540	610	690	780	860	960	1060	1160
800	480	550	630	710	800	890	980	1080	1190
820	490	570	640	730	820	910	1010	1110	1220
840	510	580	660	740	830	930	1030	1140	1250
860	520	590	680	760	850	950	1060	1160	1280
880	530	610	690	780	870	970	1080	1190	1310
900	540	620	710	800	890	1000	1100	1220	1340
920	550	640	720	820	910	1020	1130	1240	1370
940	570	650	740	830	930	1040	1150	1270	1400
960	580	660	750	850	950	1060	1180	1300	1430
980	590	680	770	870	970	1090	1200	1330	1460
1000	600	690	790	890	990	1110	1230	1350	1480
1020	610	700	800	900	1010	1130	1250	1380	1510
1040	630	720	820	920	1030	1150	1280	1410	1540
1060	640	730	830	940	1050	1170	1300	1430	1570
1080	650	750	850	960	1070	1200	1330	1460	1600
1100	660	760	860	980	1090	1220	1350	1490	1630
1120	670	770	880	990	1110	1240	1370	1520	1660
1140	690	790	900	1010	1130	1260	1400	1540	1690
1160	700	800	910	1030	1150	1280	1420	1570	1720
1180	710	810	930	1050	1170	1310	1450	1600	1750
1200	720	830	940	1060	1190	1330	1470	1620	1780
1220	730	840	960	1080	1210	1350	1500	1650	1810
1240	750	860	970	1100	1230	1370	1520	1680	1840
1260	760	870	990	1120	1250	1400	1550	1700	1870
1280	770	880	1010	1130	1270	1420	1570	1730	1900
1300	780	900	1020	1150	1290	1440	1600	1760	1930
1320	790	910	1040	1170	1310	1460	1620	1790	1960
1340	810	920	1050	1190	1330	1480	1640	1810	1990
1360	820	940	1070	1210	1350	1510	1670	1840	2020
1380	830	950	1080	1220	1370	1530	1690	1870	2050
1400	840	970	1100	1240	1390	1550	1720	1890	2080
1420	850	980	1120	1260	1410	1570	1740	1920	2110
1440	870	990	1130	1280	1430	1590	1770	1950	2140
1460	880	1010	1150	1290	1450	1620	1790	1980	2170
1480	890	1020	1160	1310	1470	1640	1820	2000	2200
1500	900	1040	1180	1330	1490	1660	1840	2030	2230
1520	910	1050	1190	1350	1510	1680	1870	2060	2260
1540	930	1060	1210	1370	1530	1710	1890	2080	2290
1560	940	1080	1230	1380	1550	1730	1910	2110	2320
1580	950	1090	1240	1400	1570	1750	1940	2140	2350
1600	960	1100	1260	1420	1590	1770	1960	2160	2380
1620	970	1120	1270	1440	1610	1790	1990	2190	2410
1640	990	1130	1290	1450	1630	1820	2010	2220	2440
1660	1000	1150	1300	1470	1650	1840	2040	2250	2460
1680	1010	1160	1320	1490	1670	1860	2060	2270	2490
1700	1020	1170	1340	1510	1690	1880	2090	2300	2520
1720	1030	1190	1350	1530	1710	1900	2110	2330	2550
1740	1050	1200	1370	1540	1730	1930	2140	2350	2580

Rail Wheel Load (lbs)



Adjust each rail wheel load as follows:

There are two rubber springs on the railgear located between each railgear outer tube assembly and spring plate. Each spring is held in place by a nylock nut above it and a spring plate with a jam nut below it. The spring plate can be lowered and raised on the threaded rod to correspondingly decrease and increase the rail wheel load.

1. Raise the railgear until the rail wheels are off the rails.
2. Loosen the 3/4" nylock nut above each spring and the 3/4" jam nut under each spring plate.
3. To decrease the load on the rail wheels, lower the spring plates on the threaded rods. To increase the load on the rail wheels, raise the spring plates on the threaded rods. Each side should be adjusted the same amount.
4. Lower the railgear to the rail position and re-check the rail wheel loads. Re-adjust the rail wheel loads if necessary.
5. Raise the railgear until the rail wheels are off the rails. Tighten the 3/4" jam nuts on the threaded rod so that they are tight against the spring plate.
6. Tighten the 3/4" nylock nuts above the springs so that the rubber springs are compressed to 3.75".
7. Lower the railgear and ensure that the springs compress at least 1" on rail.
8. Following the rail wheel load adjustment, the railgear may contact the vehicle if not enough clearance was left during installation. Check the railgear clearance to all vehicle components throughout the full range of railgear and railgear suspension movement. If there is interference with the vehicle exhaust system, it can be bent to fit, ensuring any exhaust system modifications conform to applicable laws and regulations. If there is interference with any other vehicle components, please call Rafna Industries Ltd. for technical assistance.



RAILGEAR ALIGNMENT

The railgear must be correctly aligned in order to perform properly, safely, and avoid excessive wear and derailment. The rail wheels can be independently aligned for toe-in/toe-out and the railgear can be adjusted side to side (laterally) on the vehicle. A parallel line system and the following procedure should be used to perform the railgear alignment.

The rail wheel loads should be checked and adjusted, the vehicle should have had a four-wheel alignment (with the complete railgear package installed on the vehicle and any suspension modifications done) and the tires should be properly inflated prior to performing the railgear alignment.

The railgear alignment is done with the vehicle on a straight and level section of rail with the railgear in the rail position and the vehicle wheels pointing straight ahead. The individual rail wheel alignment should be done first, followed by the lateral alignment of the railgear.

Each rail wheel is aligned by loosening the four 1/2" fasteners that secure it to the railgear axle. The rail wheel is then turned into alignment. The four 1/2" fasteners should then be tightened and torqued to 100 ft-lbs dry. Do not over torque.

The railgear is aligned laterally by loosening the eight 5/8" fasteners that secure it to the railgear mounting boxes. The railgear is then moved sideways into alignment. It may be necessary to raise the railgear off the rails to move the railgear side to side. Do not use any force against the railgear guide tubes as this may damage them and restrict suspension movement. The eight 5/8" fasteners should then be tightened and torqued to 150 ft-lbs dry. Do not over torque.

Refer to Figure 3 for alignment measurement and specifications. Use an 18" magnetic straight edge on the back of each rail wheel to measure from.

Following the railgear alignment, the railgear may contact the vehicle if not enough clearance was left during installation. Check the railgear clearance to all vehicle components throughout the full range of railgear and railgear suspension movement. If there is interference with the vehicle bumper, it can be trimmed and reinforced as required. If there is interference with the vehicle exhaust system, it can be bent to fit, ensuring any exhaust system modifications conform to applicable laws and regulations. If there is interference with any other vehicle components, please call Rafna Industries Ltd. for technical assistance.



Figure 3: Railgear Alignment

VEHICLE MODEL: _____ VEHICLE UNIT #: _____
RAILGEAR S/N: _____

SET UP PARALLEL STRING LINES
A & B MUST BE EQUAL WITHIN 1/32"
C & D MUST BE EQUAL WITHIN 1/32"

ADJUST STRING LINES AROUND VEHICLE
E, F, G, & H MUST BE EQUAL WITHIN 1/16"
I, J, K, & L MUST BE EQUAL WITHIN 1/16"
(E, F, G, & H MAY NOT EQUAL I, J, K, & L)

ADJUST RAIL WHEEL ALIGNMENT
M & O MUST BE EQUAL WITHIN 1/16"
N & P MUST BE EQUAL WITHIN 1/16"
Q & S MUST BE EQUAL WITHIN 1/16"
R & T MUST BE EQUAL WITHIN 1/16"

ADJUST RAILGEAR LATERAL ALIGNMENT
M & O MUST EQUAL N & P WITHIN 1/8"
Q & S MUST EQUAL R & T WITHIN 1/8"

ENSURE THAT U & V ARE BETWEEN
53 - 7/16" AND 53 - 9/16"

OVER-CENTER ANGLE (DEG):


FRONT _____
REAR _____

RAIL WHEEL LOAD (LBS):

LEFT FRONT _____
RIGHT FRONT _____
LEFT REAR _____
RIGHT REAR _____

RAIL WHEEL FLANGE TO GROUND CLEARANCE:

LEFT FRONT _____
RIGHT FRONT _____
LEFT REAR _____
RIGHT REAR _____

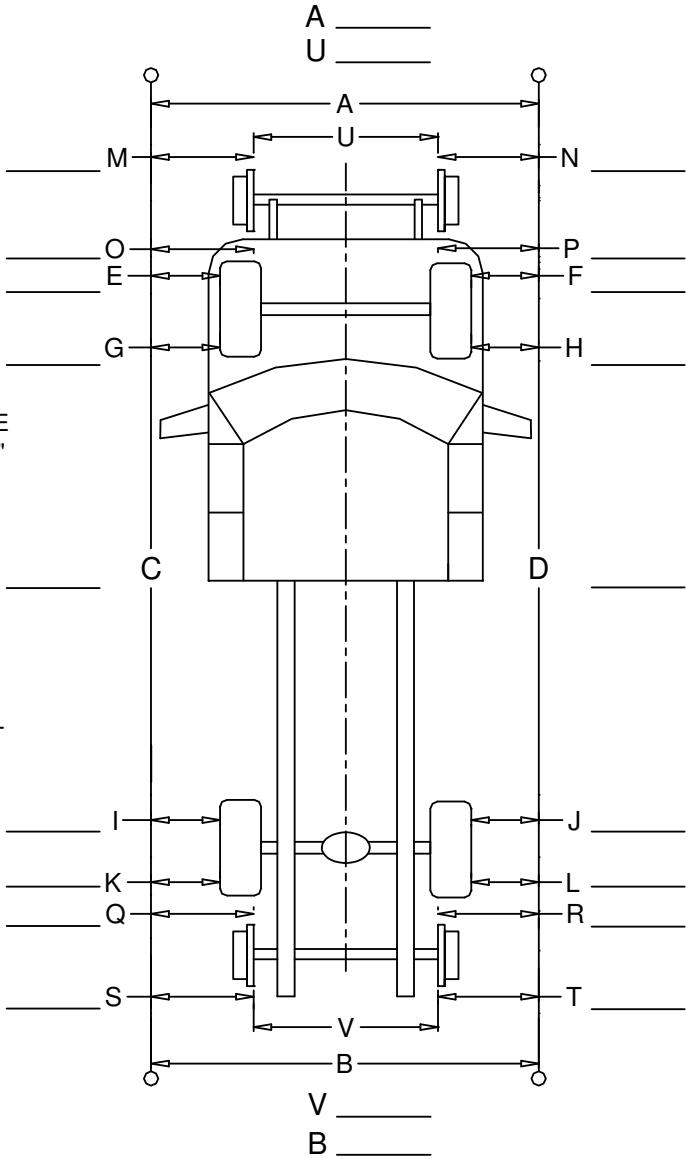




RAILGEAR LOCK SYSTEM ADJUSTMENT PROCEDURE

The rear railgear lock system provides a mechanical locking mechanism to hold the railgear axle in the road position. For the system to function properly, the contact surface of the angle plate on the axle and the top surface of the locking pins must be parallel to each other and have a contact length of 3/4" to 7/8" as shown by figure 4. If either of these criteria are not met, the following procedure can be followed:

1. If this is a re-adjustment, remove any tack welds holding the lock-up support to the lock-up frame and the lock-up frame to each mounting box.
2. Raise the railgear to the road position. Support the railgear axle and the lock-up system.
3. Loosen the four 1/2" fasteners that secure the lock-up support to the lock-up frame.
4. Adjust the lock-up support up or down accordingly so that the pin and the contact surface of the angle plate are parallel. Tighten but do not torque the four 1/2" fasteners.
5. Loosen the four 3/8" fasteners that secure the lock-up plate to the lock-up support.
6. Adjust the lock-up plate in or out accordingly so that the contact surface of the angle plate and the top surface of the pin have a contact length of 3/4" to 7/8". Tighten but do not torque the four 3/8" fasteners.
7. Ensure that the lock system has been properly adjusted and repeat the above steps as necessary.
8. Torque the 3/8" fasteners to 40 ft-lbs dry. Torque the 1/2" fasteners to 100 ft-lbs dry. Do not over torque.
9. Tack weld the plate to the lock-up support, the lock-up support to the lock-up frame and the lock-up frame to each mounting box to prevent movement of the parts.



Figure 4. Lock-Up System Adjustment

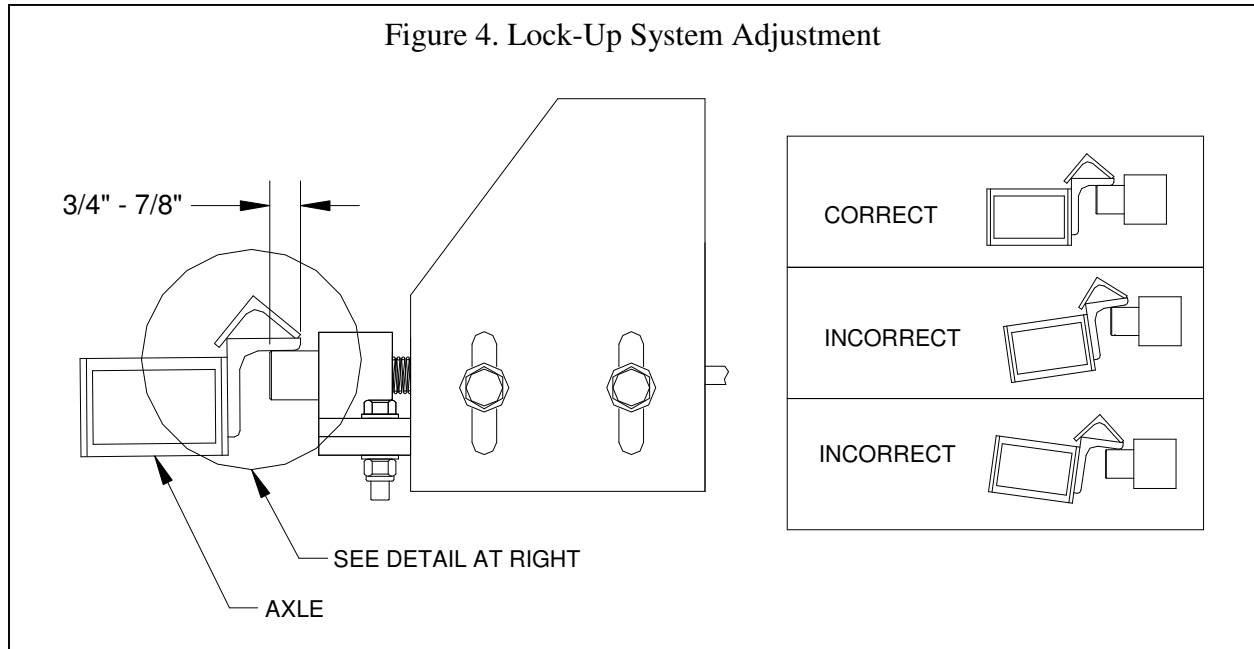




PARTS OF R-450 OT ROTATING REAR RAILGEAR KIT

RAFNA INDUSTRIES LIMITED MONTREAL, QUE.	
NOTE:	NOT FULL SCALE ON PAPER
DESCRIPTION:	R-450 OT ROTATING REAR RAILGEAR KIT
REFERENCE:	R-450 OT
MAT'L:	
PART NO.:	DATE: NOV/02/04
DRAWN: LE	APPROVED:
DIM: INCHES	DRAWING SCALE 1:1
PAGE 1 OF 1	DWG No.: K-R45XRFR4869B

ITEM	PART NO.	PART DESCRIPTION	QTY	ITEM	PART NO.	PART DESCRIPTION	QTY
1	R-4869EB	ROTATING REAR RAILGEAR	1	10		1/2" UNC GR. 8 NYLOCK NUT	8
2	R-001	10" WHEEL ASSEMBLY (RIGHT SIDE NOT SHOWN)	2	11		5/8" UNC GR. 8 BOLT X 2" LONG	6
3	R-4646R	RAIL SWEEP - RIGHT SIDE (NOT SHOWN)	1	12		5/8" GR. 8 WASHER	12
4	R-4646L	RAIL SWEEP - LEFT SIDE	1	13		5/8" UNC GR. 8 NYLOCK NUT	6
5	R-4838	PUSH-PULL CABLE	1	14		3/4" UNC GR. 8 BOLT X 2.5" LONG	4
6	S-001031	RAILGEAR OPERATION DECAL (NOT SHOWN)	1	15		3/4" GR. 8 WASHER	8
7		"PULL TO UNLOCK" DECAL (NOT SHOWN)	1	16		3/4" UNC GR. 8 NYLOCK NUT	4
8		1/2" UNC GR. 8 BOLT X 2.25" LONG	8	17		VEHICLE FRAME	N/A
9		1/2" GR. 8 WASHER	16				




NOTE: IDENTICAL FASTENERS ARE NOT SHOWN FOR CLARITY.

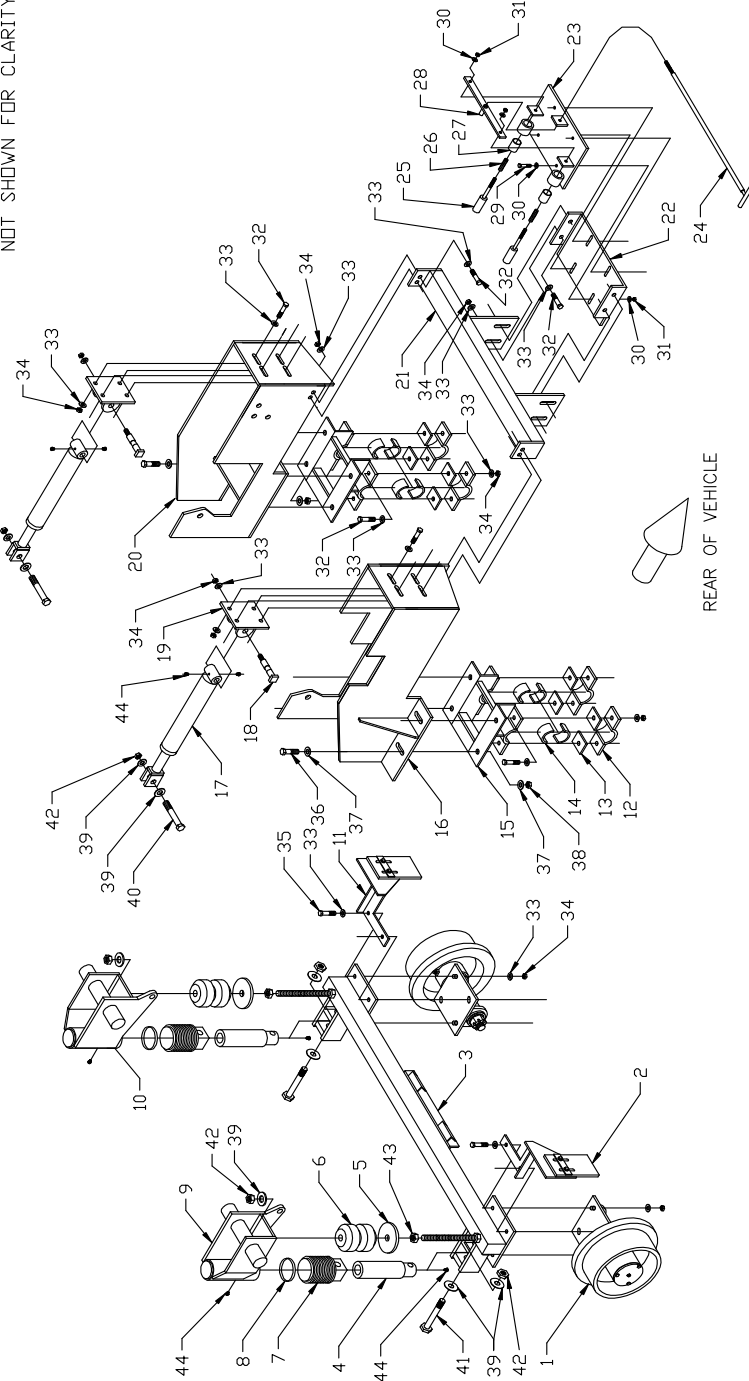

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	R-001	10" WHEEL ASSEMBLY	2	23	R-4826	LOCK-UP PLATE ASSEMBLY	1
2	R-4646L	RAILSWEEP (LEFT SIDE) (W/O BRAKES)	1	24	R-4838	LOCK CABLE	1
3	R-4813	REAR AXLE ASSEMBLY	1	25	R-4832	LOCKING PIN	2
4	R-4812	REAR INNER TUBE	2	26	R-3561	SPRING	2
5	R-4588	SPRING PLATE	2	27	R-4831	BUSHING	2
6	R-476	RUBBER SPRING	2	28	R-4834	LOCKING CABLE BAR	1
7	R-3590	BELLOWS	2	29	-	3/8" UNC GR.8 X 1.75" LONG	4
8	R-602	CLAMP	2	30	-	3/8" UNC GR.8 WASHER	10
9	R-4800D	OUTER TUBE ASSEMBLY (LEFT SIDE)	1	31	-	3/8" UNC GR.3 NYLON INSERT LOCK NUT	6
10	R-4800P	OUTER TUBE ASSEMBLY (RIGHT SIDE)	1	32	-	1/2" UNC GR.8 BOLT X 2" LONG	24
11	R-4646R	RAILSWEEP (RIGHT SIDE) (W/O BRAKES)	1	33	-	1/2" UNC GR.8 WASHER	66
12	R-3602B	BEARING END CAP	4	34	-	1/2" UNC GR.8 NYLON INSERT LOCK NUT	34
13	R-3602A	SHIM	8	35	-	1/2" UNC GR.8 BOLT X 2.25" LONG	8
14	R-3618	SPLIT BEARING	4	36	-	5/8" UNC GR.8 BOLT X 2" LONG	8
15	R-4809	REAR BEARING BOX	2	37	-	5/8" GR.8 WASHER	16
16	R-4872D	REAR MOUNTING BOX (LEFT SIDE)	1	38	-	5/8" UNC GR.8 NYLON INSERT LOCK NUT	8
17	R-4628	HYDRAULIC CYLINDER	2	39	-	3/4" GR.8 WASHER	10
18	R-4649	PIN	2	40	-	3/4" UNC GR.8 BOLT X 3" LONG	2
19	R-4818	HYDRAULIC CYLINDER SUPPORT	2	41	-	3/4" UNC GR.8 BOLT X 5" LONG	2
20	R-4872P	REAR MOUNTING BOX (RIGHT SIDE)	1	42	-	3/4" UNC THIN NYLON INSERT LOCK NUT	6
21	R-4820	LOCK-UP MOUNTING FRAME	1	43	-	3/4" UNC JAM NUT	2
22	R-4823	LOCK-UP SUPPORT	1	44	-	1/8" NPT GREASE FITTING	8


RAFNA INDUSTRIES LTD. 19300 CLARK-GRAHAM BAIE D'URFE, QUEBEC (514) 457-4373	
DESCRIPTION:	ROTATING REAR RAILGEAR
REFERENCE:	R-450 OT
MAT'L:	
P/N: P-4869	DATE: NOV/02/04
DRAWN: LE	APPR:
DIM: INCHES	SCALE: 1:1
SHEET: 1 OF 1	DWG: R-4869_EXPL

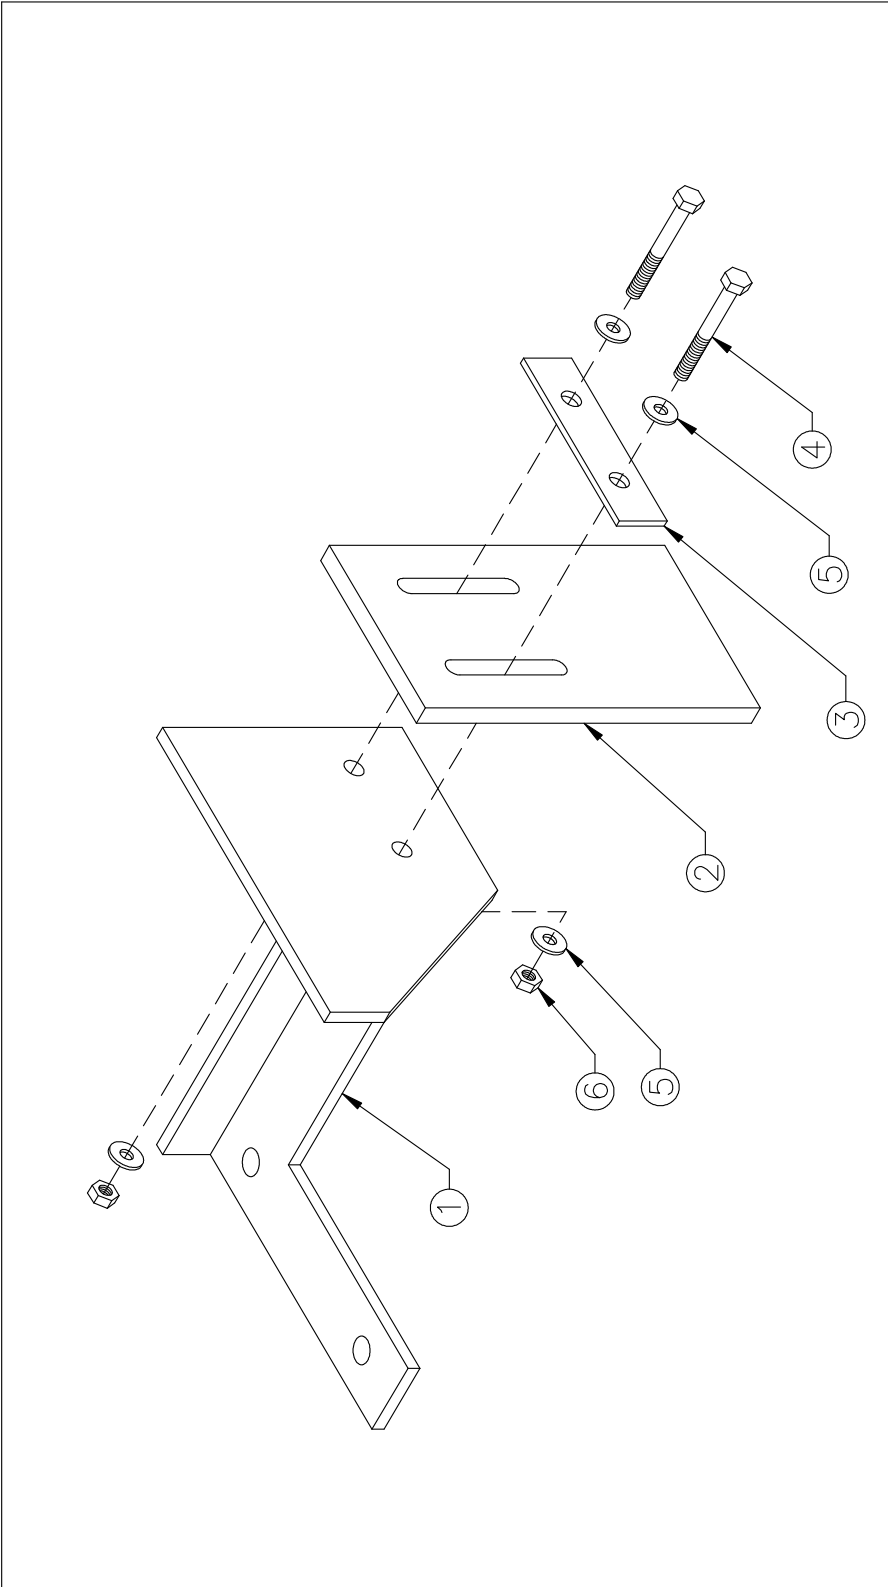

RAFNA INDUSTRIES LIMITED MONTREAL, QUE.
NOTE: NOT FULL SCALE ON PAPER
DESCRIPTION: REAR RAIL SWEEP ASSEMBLY
REFERENCE: R-450
MAT'L:
PART NO: R-4646R / DATE: OCT/27/04
DRAWN: LE APPROVED:
DIM: INCHES DRAWING SCALE 1:1
PAGE 1 OF 1 DWG NO.: R-4646 EXPL

PARTS LIST

ITEM	PART NO.	PART DESCRIPTION	QTY / ASSEMBLY
1	R-4644R/L	RAIL SWEEP BRACKET (RIGHT / LEFT)	1
2	R-1001	RAIL SWEEP RUBBER	1
3	R-5561	SWEEPER PLATE	1
4	-	1/4" UNC GR. 8 BOLT X 1.25" LONG	2
5	-	1/4" SAE WASHER	4
6	-	1/4" UNC GR. 3 NYLON INSERT LOCK NUT	2

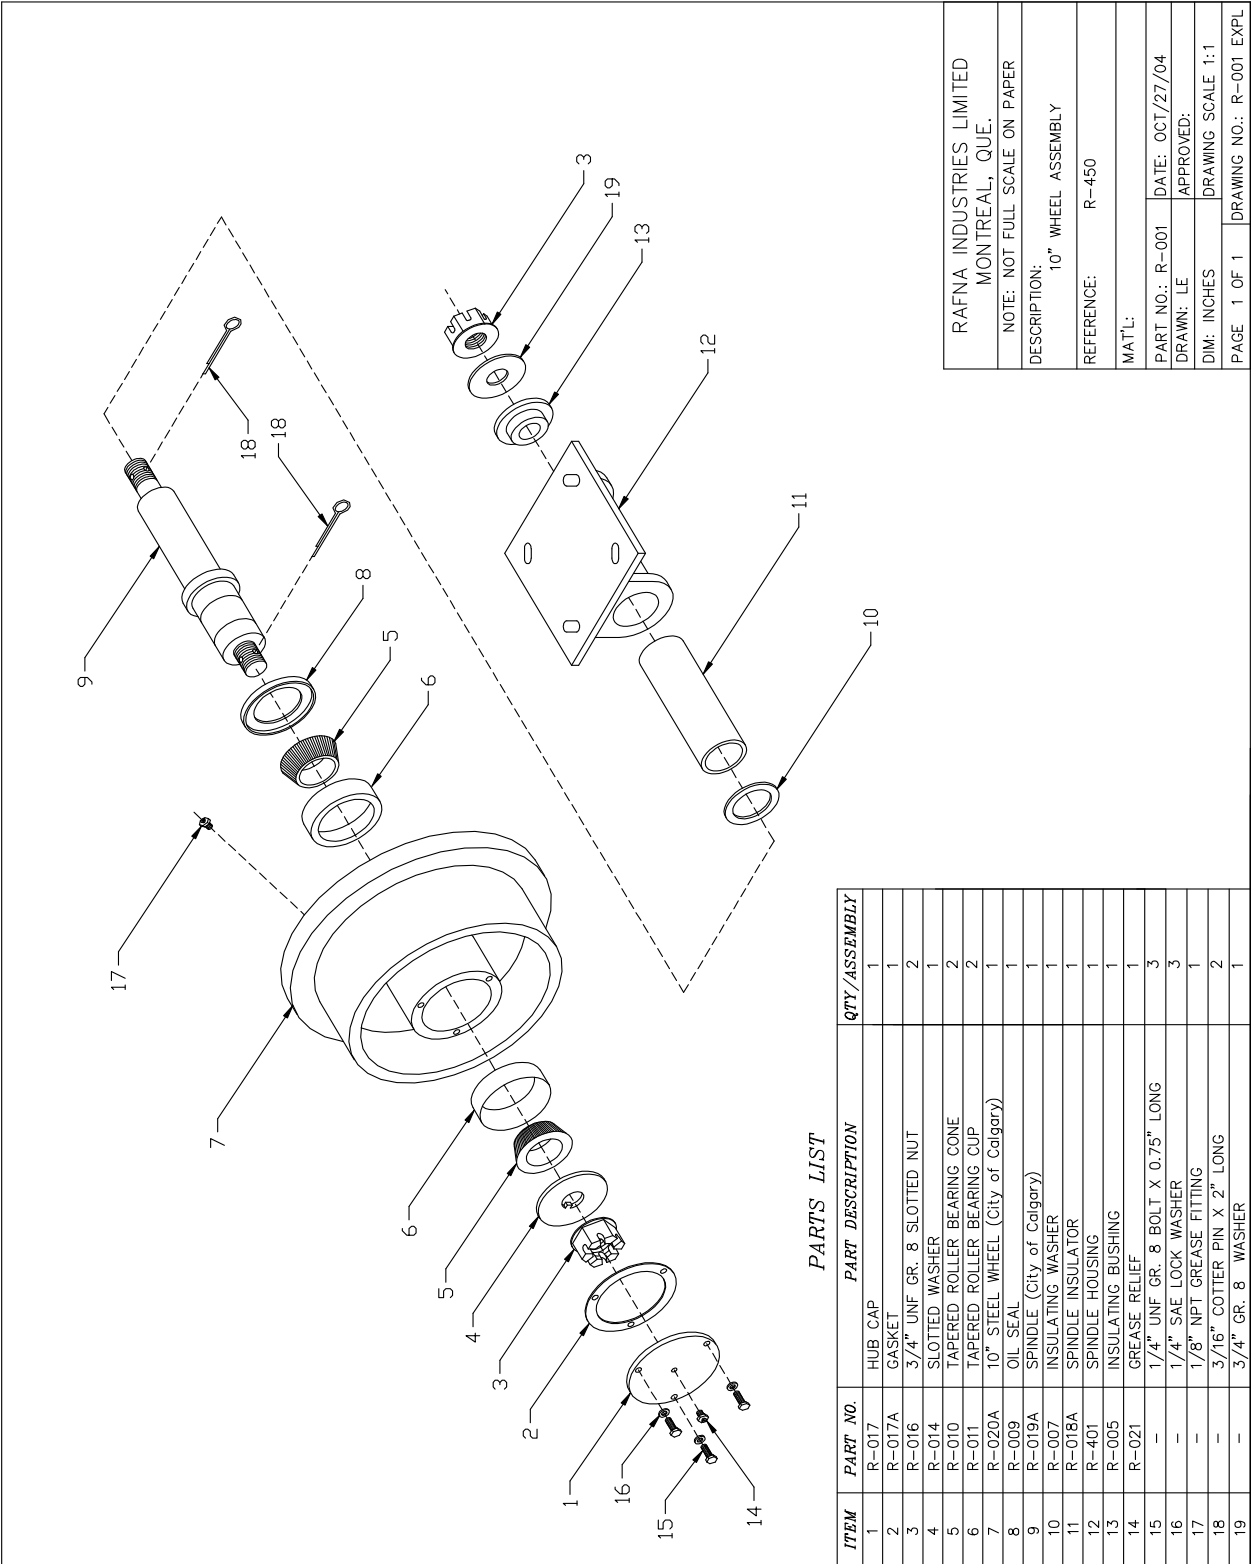

PARTS LIST

ITEM	PART NO.	PART DESCRIPTION	QTY/ASSEMBLY
1	R-017	HUB CAP	1
2	R-017A	GASKET	1
3	R-016	3/4" UNF GR. 8 SLOTTED NUT	2
4	R-014	SLOTTED WASHER	1
5	R-010	TAPERED ROLLER BEARING CONE	2
6	R-011	TAPERED ROLLER BEARING CUP	2
7	R-020A	10" STEEL WHEEL (City of Calgary)	1
8	R-009	OIL SEAL	1
9	R-019A	SPINDLE (City of Calgary)	1
10	R-007	INSULATING WASHER	1
11	R-018A	SPINDLE INSULATOR	1
12	R-401	SPINDLE HOUSING	1
13	R-005	INSULATING BUSHING	1
14	R-021	GREASE RELIEF	1
15	-	1/4" UNF GR. 8 BOLT X 0.75" LONG	3
16	-	1/4" SAE LOCK WASHER	3
17	-	1/8" NPT GREASE FITTING	1
18	-	3/16" COTTER PIN X 2" LONG	2
19	-	3/4" GR. 8 WASHER	1

RAFNA INDUSTRIES LIMITED MONTREAL, QUE.	
NOTE: NOT FULL SCALE ON PAPER	
DESCRIPTION: 10" WHEEL ASSEMBLY	
REFERENCE: R-450	
MATERIAL:	
PART NO.: R-001	DATE: OCT/27/04
DRAWN: LE	APPROVED:
DIM: INCHES	DRAWING SCALE 1:1
PAGE 1 OF 1	DRAWING NO.: R-001 EXPL



RAFNA INDUSTRIES LIMITED
MONTREAL, QUE.

NOTE: NOT FULL SCALE ON PAPER

DESCRIPTION: HYDRAULIC CYLINDER 2" BORE
x 8" STROKE

REFERENCE: R-450 HD
REAR UNIT

MAT'L:

PART NO.: R-4628 DATE: MAR. 02/99


DRAWN: V.Z. APPROVED:

DIM: INCHES DRAWING SCALE 1:1

PAGE 1 OF 1 DRAWING NO.: R4628

BILL OF MATERIALS

ITEM	PART NO.	DESCRIPTION OF ITEM (PART)	QUANTITY
1	R-9086	HYDRAULIC CYLINDER TUBE ASSEMBLY	1
2	R-9011B	HYDRAULIC CYLINDER ROD ASSEMBLY	1
3	R-9008	HYDRAULIC CYLINDER HEAD	1
4	-	1/8" NPT GREASE FITTING - STRAIGHT	1
-	R-9007	HYDRAULIC CYLINDER PISTON (NOT SHOWN)	1
-	SK-200	SEAL KIT ϕ 2" BORE (NOT SHOWN)	1
-	SK-075	SK-STOVERNUT 075 (NOT SHOWN)	1

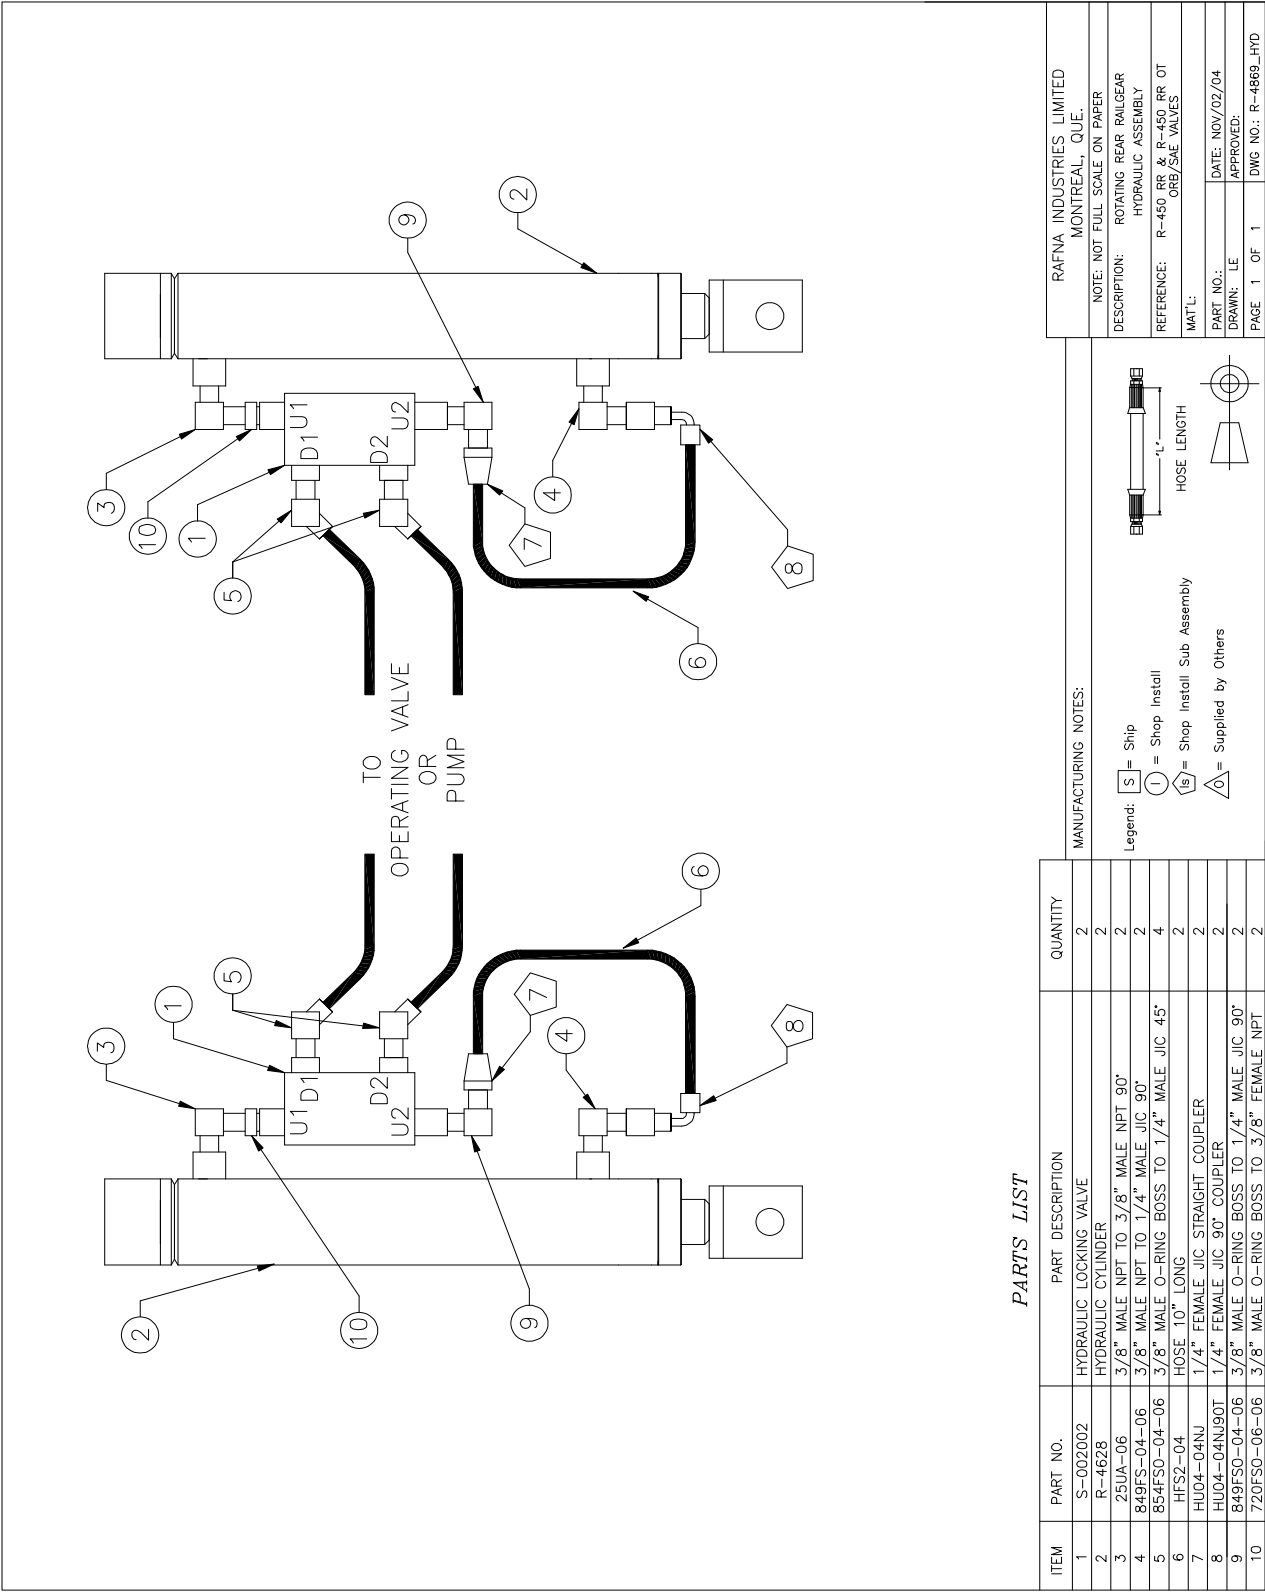

PARTS LIST

ITEM	PART NO.	PART DESCRIPTION	QUANTITY
1	S-002002	HYDRAULIC LOCKING VALVE	2
2	R-4628	HYDRAULIC CYLINDER	2
3	25UA-06	3/8" MALE NPT TO 3/8" MALE NPT 90°	2
4	849FS-04-06	3/8" MALE NPT TO 1/4" MALE JIC 90°	2
5	854FS0-04-06	3/8" MALE O-RING BOSS TO 1/4" MALE JIC 45°	4
6	HFS2-04	HOSE 10" LONG	2
7	HU04-04NJ	1/4" FEMALE JIC STRAIGHT COUPLER	2
8	HU04-04NJ90T	1/4" FEMALE JIC 90° COUPLER	2
9	849FS0-04-06	3/8" MALE O-RING BOSS TO 1/4" MALE JIC 90°	2
10	720FS0-06-06	3/8" MALE O-RING BOSS TO 3/8" FEMALE NPT	2