

WHEEL KIT INSTALLATION - ALUMINUM 2011 And Up GM 2500/3500 4X2/4x4

SAFETY PRECAUTIONS

If any installation problems are encountered, please call G&B Specialties Inc. for technical assistance before continuing with the installation process.



- Failure to heed to any of the following warnings could result in severe bodily injury and/or equipment damage.
- Read and understand this manual completely before attempting installation of the equipment.
- Installation instructions provided below only address the Rafna Industries railgear equipment. Applicable railway company procedures and policies must be adhered to.
- The road wheels and tires must be installed before the railgear is installed in order to obtain correct height measurements.
- Do not hit the wheel adapter with any hard objects as this could dent the adapter and cause vibrations when driving. If the adapters do not easily slide onto the hubs, lightly sand the hub and the inside of the adapter.
- Always disconnect the vehicle's battery when welding on the vehicle or railgear in order to protect the vehicle's electrical system.
- Before performing any work under the vehicle or railgear, ensure the engine is turned off and the parking brake is set.
- With the installation of the vehicle road wheels and tires, it is recommended to recalibrate the vehicle's speedometer.

INSTALLATION OF WHEELS AND TIRES

The following procedure details the installation of the wheels and tires required for the vehicle's tires to ride correctly on the rails and avoid contact with the vehicle.


Wheel And Tire Installation Kit (for 4 or 5 wheel)

Part Number	Description	Qty
R-32251	19.5" Aluminum Wheel	4 or 5
R-32197	140 ft-lbs Spacer Decal	4 or 5
-	GOODYEAR Tire G-622 RSD 225/70R19.5	REF

1. Remove the original front and rear wheels.
2. Based on rail contact area and load carrying capacity, G&B Specialties Inc. suggests the use of Goodyear G-622 RSD (225/70R19.5) tires for all wheels on the railgear equipped vehicle. However, at the installer's and/or railroad's discretion, an equivalently sized and rated tire may be used. Mount and balance the tires on the supplied wheels. Install TPMS sensors if required.
3. Affix the supplied wheel torque decals to the outside face of the wheels.
4. A new location must be found for the spare wheel. It cannot be mounted under the cargo box due to interference with the rear railgear.
5. Install the wheels:
 - a) Mount the wheels on the OEM hubs. No wheel adapter is necessary.
 - b) Using the OEM lug nuts, tighten and then torque to 140 ft-lbs dry. Do not over torque.
6. Due to the modified wheel track on the railgear equipped vehicle, both front and rear tire and wheel clearances must be checked. With the wheels and tires turning installed on the vehicle, ensure that the wheels, tires, and/or balance weights do not contact the vehicle suspension or steering components, the brake lines, the ABS lines and/or any other component/obstruction throughout the entire range of motion of the steering and suspension.

Ensure that any vehicle modifications are done in accordance with the vehicle manufacturer's or their representative's approval.
7. The speedometer will need to be recalibrated due to the change in tire size.
 - Bigger tires will cause your speedometer to register a speed that is slower than your actual speed.
8. The vehicle will need to have a wheel alignment done. After the wheel kit is installed and the railgear is hung.
9. The tire pressure sensors (if equipped) will need to be calibrated to learn new position. For this wheel kit, follow the OEM recommendations as outlined in the vehicles owner manual.

BILL OF MATERIAL/PARTS LIST	
ITEM	DESCRIPTION
1	WELD 20" ALUMINUM WHEEL
2	TORQUE DECAL
3	OSH LUG NUT
4	OSH HUB

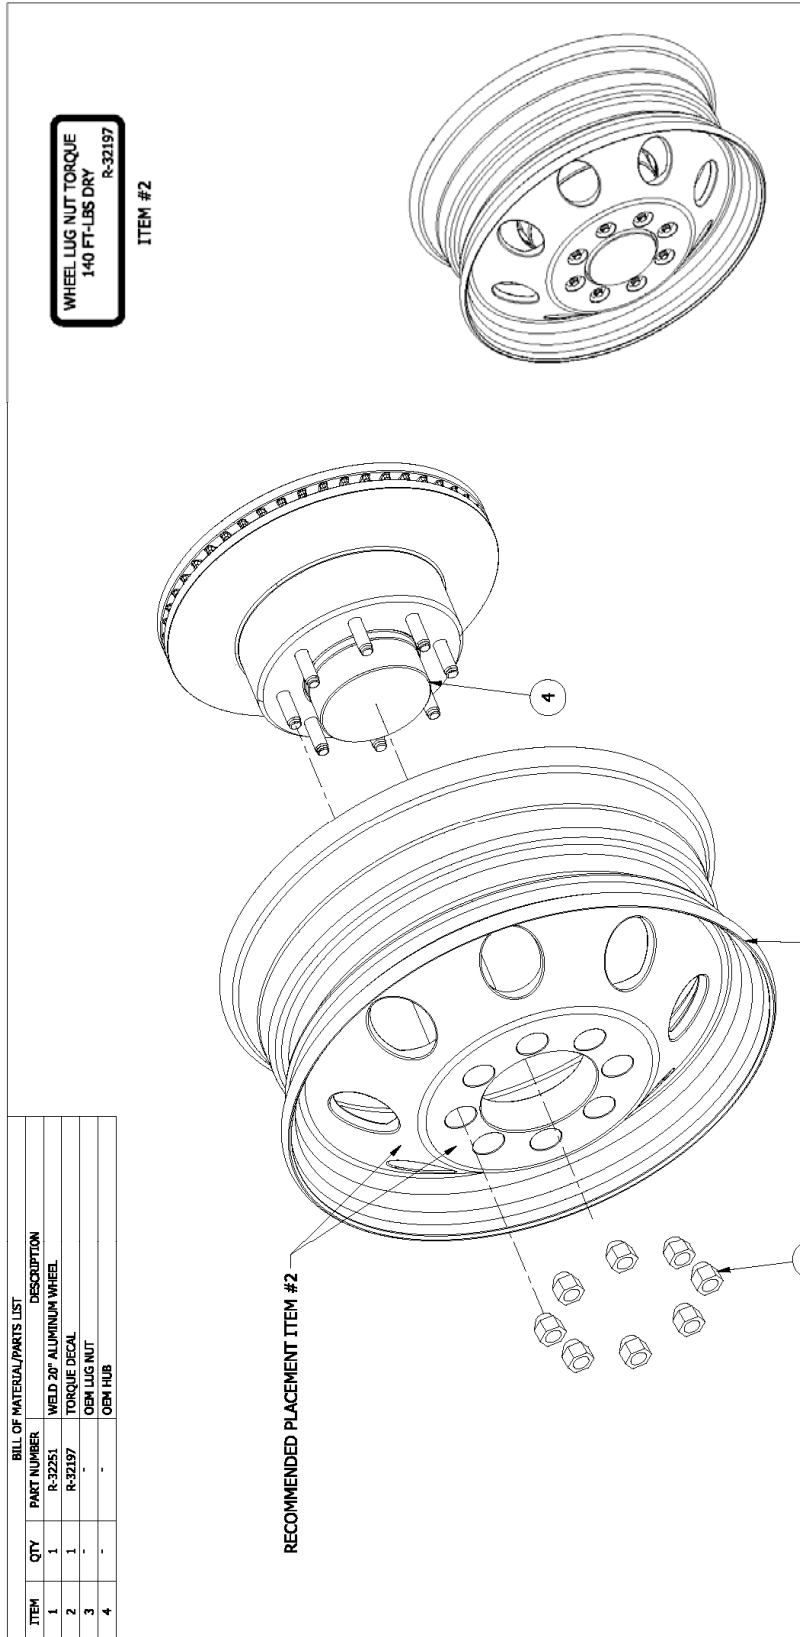

RECOMMENDED PLACEMENT ITEM #2

REV	CHANGE	DATE	BY	APPD
E	REDRAWN	12/29/15	AML	JZ

G & B SPECIALTIES INC.
 535 WEST 3RD STREET, BERWICK, PA 17004
 TEL: (570) 752-5901 FAX: (570) 752-6397

DESIGN - ENGINEERING - MANUFACTURING

WHEEL MT. ALUMINUM
INSTALLATION

2011 LPT GM #62/048

DATE ISSUED: 12/29/15 1 OF 1
 K-M29ALG001 K-M29ALG001


PRIMARY UNITS ARE INCH. DIMENSIONS UNITS ARE MILLIMETER.
 DO NOT SCALE DRAWING

TOLERANCE	UNITS	DECIMALS	FRACTIONS	DECIMALS	FRACTIONS
±.005	INCHES	±.005	±.005	±.005	±.005
±.010	INCHES	±.010	±.010	±.010	±.010
±.015	INCHES	±.015	±.015	±.015	±.015
±.020	INCHES	±.020	±.020	±.020	±.020
±.030	INCHES	±.030	±.030	±.030	±.030
±.040	INCHES	±.040	±.040	±.040	±.040
±.050	INCHES	±.050	±.050	±.050	±.050
±.060	INCHES	±.060	±.060	±.060	±.060
±.070	INCHES	±.070	±.070	±.070	±.070
±.080	INCHES	±.080	±.080	±.080	±.080
±.090	INCHES	±.090	±.090	±.090	±.090
±.100	INCHES	±.100	±.100	±.100	±.100
±.125	INCHES	±.125	±.125	±.125	±.125
±.150	INCHES	±.150	±.150	±.150	±.150
±.175	INCHES	±.175	±.175	±.175	±.175
±.200	INCHES	±.200	±.200	±.200	±.200

ALL WELDS TO CONFORM TO AWS D1.1

REV	CHANGE	DATE	BY	APPD
A	DRAWING RELEASED	12/23/15	AML	AML


SNAP-IN INSTALLATION

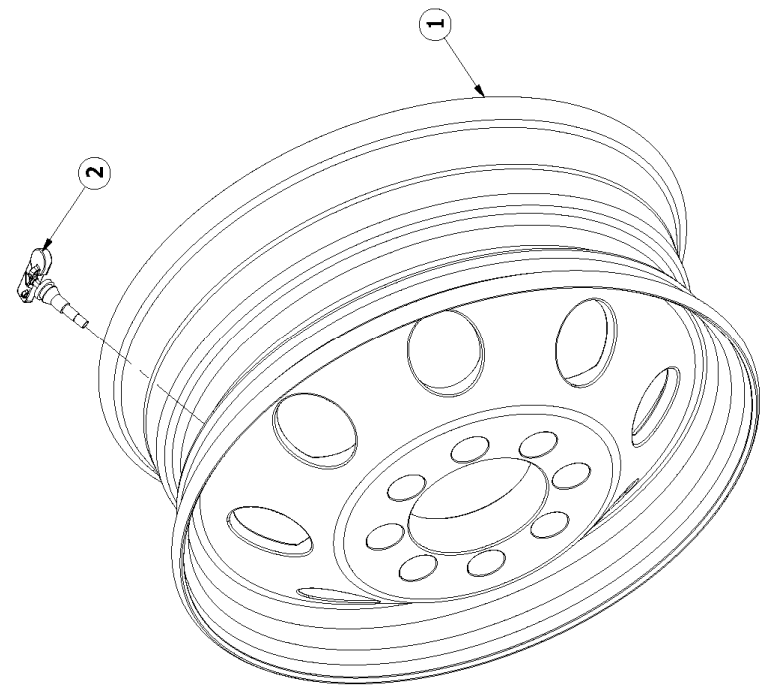

INSTALL PER ACCEPTED INDUSTRY STANDARDS

ITEM	PART No.	DESCRIPTION OF ITEM(PART)	QTY.
1	R-32251	19.5" ALUMINUM WHEEL (WELD)	1
2	R-10055A	TIRE PRESSURE SENSOR (SNAP-IN)	1


OPTIONAL CLAMP-ON INSTALLATION

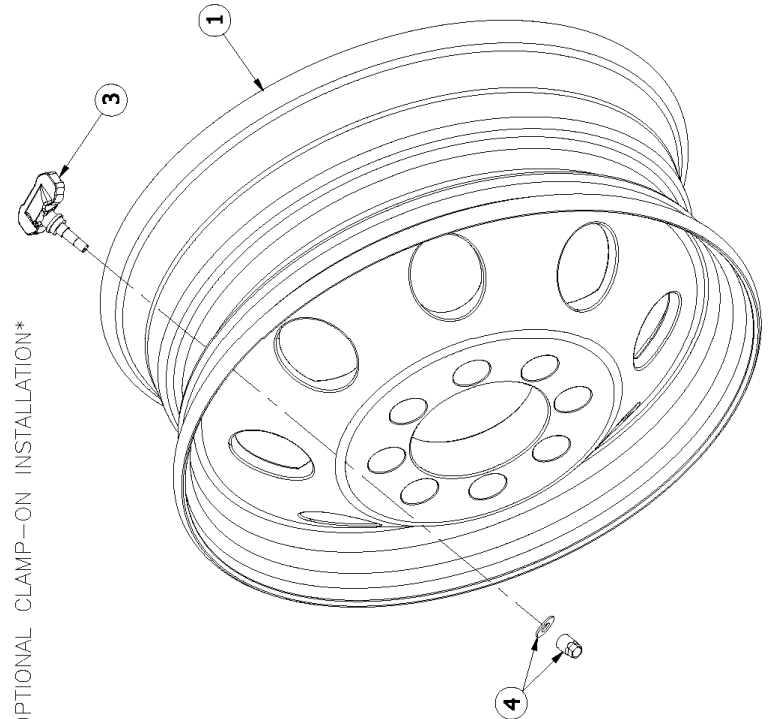

INSTALL PER ACCEPTED INDUSTRY STANDARDS

ITEM	PART No.	DESCRIPTION OF ITEM(PART)	QTY.
1	R-32251	19.5" ALUMINUM WHEEL (WELD)	1
3	R-10055	TIRE PRESSURE SENSOR (CLAMP-ON)	1
4	R-10055N	SEAL KIT	1

SNAP-IN INSTALLATION

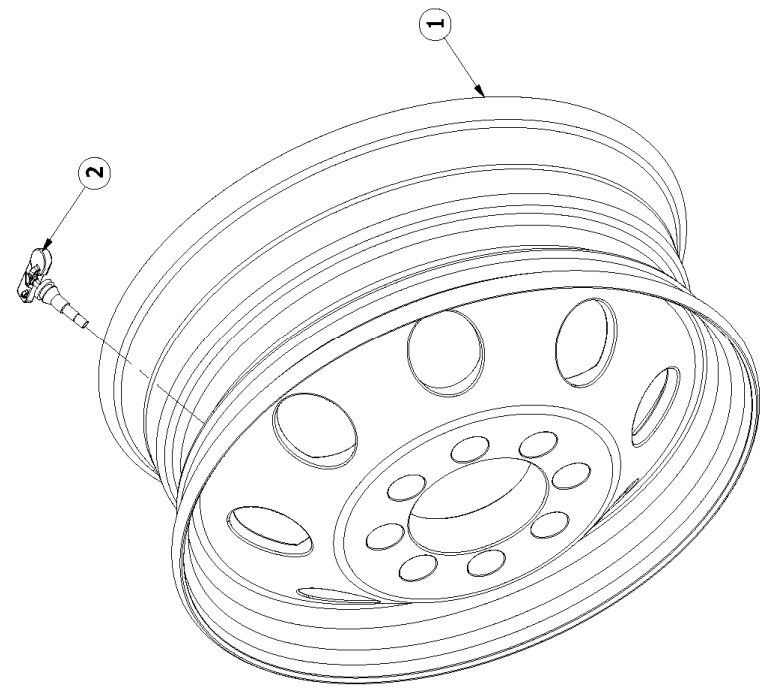

INSTALL PER ACCEPTED INDUSTRY STANDARDS

TOLERANCE ON FINISHED DIMENSIONS UNLESS OTHERWISE SPECIFIED		TYPICALS		FRAC TIONS		DECIMALS		PLACES	
UP TO	ABOVE	6 TO 24	ABOVE 24	±	±	±	±	±	±
1/84	1/32	±.03	±.015	±.02	±.005	±.005	±.005	±.005	±.005
1/16	1/16	±.06	±.015	±.06	±.015	±.015	±.015	±.015	±.015
ANGULAR DIMENSIONS		± 1/2°							

Ref: TPMS Installation

OPERATION AND SERVICE OF WHEEL KIT

SAFETY PRECAUTIONS

If any operating, services or parts problems are encountered, please call G&B Specialties Inc. for technical assistance.



- Failure to heed to any of the following warnings could result in severe bodily injury and/or equipment damage.
- Read and understand this manual completely before attempting operation of the railgear equipped vehicle.
- Operating instructions provided below only address the Rafna Industries railgear equipment. Applicable railway company procedures and policies must be adhered to.
- Railway company rules governing rail travel must be observed at all times.
- Before performing any work under the vehicle or railgear, ensure the engine is turned off and the parking brake is set.
- This vehicle has an increased turning radius and decrease stability and braking ability. Use caution when operating both on road and rail.
- Following the first 25 miles (40 km) of road and rail travel, the road wheel and adapter lug nuts must be re-torqued. Refer to the service section of this manual for the procedure.
- Never operate the vehicle if the Gross Vehicle Weight Rating (GVWR), Gross Axle Weight Rating Front or Rear (GAWR), or the wheel or tire load ratings are exceeded.

OPERATION OF WHEEL KIT

With the wheels and tires installed on this vehicle, it may be operated as normal, however caution must be used as the vehicle now has an increased turning radius and decreased stability and braking ability both on road and rail.

Never operate the vehicle if the Gross Vehicle Weight Rating (GVWR), Gross Axle Weight Rating Front or Rear (GAWR), or the wheel or tire load ratings are exceeded.

SERVICE OF WHEEL KIT

The wheels and tires must be serviced regularly to avoid damage to the equipment.

If ever vibrations are felt through the vehicle, inspect the balance and alignment of the road wheels and tires.

SERVICE/INSPECTION REQUIREMENTS

- Visually inspect wheels & tires daily that they are in safe operating condition.
- Check lug nut torque at installation.*
- Check the lug nut torque 25 miles (40km) after wheel/tire change and every 6 months thereafter.*
- Check/adjust tire pressure as/if required.

TIRE BALANCE/ROTATION

- Balance and Rotate as necessary/recommended by tire manufacturer. Verify that balance weights placed on inside bead of rim are clear of obstructions.

WARNING/CAUTION

- Never use anti-seize on studs or lug nuts.
- Hand torque to specifications, do not use pneumatic tools.
- Always inspect the condition of the wheel before and after service.
- Loose lug nuts can lead to metal fatigue and ultimately to wheel failure or broken studs.

WELD ALUMINUM WHEEL TORQUE SPECIFICATION: 140 FT-LBS DRY*
RECOMMENDED TIRE PRESSURE: 85 PSI

Torque Service/Specification per manufacture recommendation